# HP LaserJet M5025/M5035 MFP Series printers

## Service manual

For the complete PDF manual
please visit www.LaserPros.com.

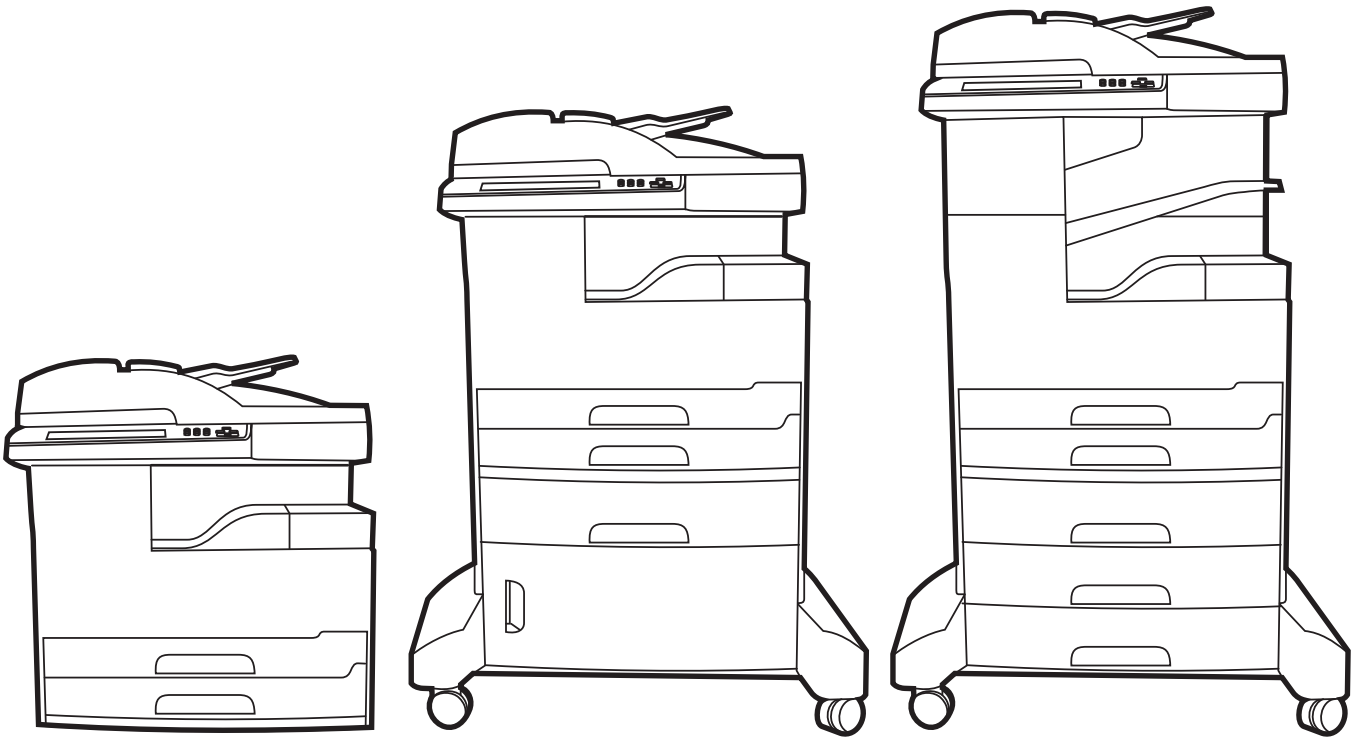

# HP LaserJet M5025 and HP LaserJet M5035 Series MFP

---

Service Manual

**Copyright and License**

© 2006 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: Q7829-90908

Edition 1, 10/2006

**Trademark Credits**

Adobe®, Acrobat®, and PostScript® are trademarks of Adobe Systems Incorporated.

Linux is a U.S. registered trademark of Linus Torvalds.

Microsoft®, Windows®, and Windows NT® are U.S. registered trademarks of Microsoft Corporation.

UNIX® is a registered trademark of The Open Group.

ENERGY STAR® and the ENERGY STAR logo® are U.S. registered marks of the United States Environmental Protection Agency.

Java ™ is a U.S. registered trademark of Sun Microsystems, Inc.

# Table of contents


1 Basics

Device comparison ..... 2
Features comparison ..... 3
Walkaround ..... 5
Device parts ..... 5
Interface ports ..... 8
Device software ..... 9
Supported operating systems ..... 9
Supported printer drivers ..... 9
Select the correct printer driver ..... 10
Universal printer drivers ..... 10
Driver Autoconfiguration ..... 10
Update Now ..... 11
HP Driver Preconfiguration ..... 11
Priority for print settings ..... 11
Open the printer drivers ..... 12
Software for Macintosh computers ..... 13
Remove software from Macintosh operating systems ..... 13
Utilities ..... 14
HP Web Jetadmin ..... 14
Embedded Web server ..... 14
Send Fax Driver ..... 14
HP Easy Printer Care software ..... 15
Supported operating systems ..... 15
Supported browsers ..... 15
Other components and utilities ..... 15

2 Installation and configuration

Site requirements ..... 18
Operating environment ..... 20
I/O configuration ..... 21
USB configuration ..... 21
Network configuration ..... 21
Configure TCP/IPv4 parameters ..... 22
Set an IP address ..... 22
Set the subnet mask ..... 22
Set the default gateway ..... 23
Configure TCP/IPv6 parameters ..... 23
Disable network protocols (optional) ..... 24

Disable IPX/SPX ..... 24
Disable AppleTalk ..... 24
Disable DLC/LLC ..... 24
HP Jetdirect EIO print servers ..... 25
Installing printer memory ..... 26
To install printer memory ..... 26

**3 Manage and maintain the device**

Use the embedded Web server ..... 30
Open the embedded Web server by using a network connection ..... 30
Embedded Web server sections ..... 31
Use HP Web Jetadmin software ..... 33
Use the HP Printer Utility for Macintosh ..... 34
Open the HP Printer Utility ..... 34
HP Printer Utility features ..... 35
Use the Administration menu ..... 36
Navigate the Administration menu ..... 36
Information menu ..... 36
Default Job Options menu ..... 37
Default Options for Originals ..... 37
Image adjustment ..... 39
Default Copy Options ..... 40
Default Fax Options ..... 41
Default E-mail Options ..... 42
Default Send to Folder Options ..... 43
Default Print Options ..... 44
Time/Scheduling menu ..... 45
Management menu ..... 47
Initial Setup menu ..... 48
Networking and I/O ..... 48
Fax Setup ..... 56
E-mail Setup ..... 59
Send Setup menu ..... 59
Device Behavior menu ..... 60
Print Quality menu ..... 64
Troubleshooting menu ..... 67
Resets menu ..... 76
Service menu ..... 76
Use information pages ..... 76
Configuring and verifying an IP address ..... 79
Identifying the TCP/IP address ..... 79
Use automatic discovery ..... 79
Set up a dynamic host configuration protocol (DHCP) ..... 79
Verifying the TCP/IP configuration ..... 79
Changing an IP address ..... 79
Change an IP address by using HP Web Jetadmin ..... 79
Change an IP address by using the embedded Web server ..... 80
Change an IP address by using the control panel ..... 80
Remote firmware updates ..... 81
Introduction ..... 81

Print the configuration page ..... 81
Printing a menu map ..... 82
Downloading the new firmware from the HP Web site ..... 82
Downloading the new firmware to the device ..... 82
Troubleshooting firmware updates ..... 82
Remote firmware update by using FTP through a browser ..... 84
Remote firmware update by using FTP on a direct network connection ..... 85
Remote firmware update through a local MS Windows port ..... 86
Windows NT 4.0, Windows 2000, Windows XP, Windows XP or Windows 2003 ..... 86
Remote firmware update through a USB port ..... 87
Remote firmware update through an MS Windows network ..... 88
Remote firmware update for UNIX systems ..... 89
Remote firmware update by using the LPR command ..... 89
Remote firmware update through HP Web Jetadmin ..... 90
Manage supplies ..... 92
Supplies life ..... 92
Approximate print-cartridge replacement intervals ..... 92
Manage the print cartridge ..... 92
Print-cartridge storage ..... 92
Use genuine HP print cartridges ..... 92
HP policy on non-HP print cartridges ..... 92
Print-cartridge authentication ..... 93
HP fraud hotline and Web site ..... 93
Replace supplies and parts ..... 94
Supply replacement guidelines ..... 94
Change the print cartridge ..... 94
Perform preventive maintenance ..... 97
Preventive maintenance for the print engine ..... 97
The ADF maintenance kit ..... 97
Clean the device ..... 98
Clean the exterior ..... 98
Clean the scanner glass ..... 98
Clean the scanner lid backing ..... 99
Clean the ADF ..... 100
Clean the print engine paper path ..... 100

**4 Theory of operation**

MFP system overview ..... 104
Print engine ..... 106
Basic sequence of operation ..... 106
Power-on sequence ..... 107
Engine control system ..... 107
DC controller PCA ..... 108
High-voltage power-supply PCA ..... 109
Low-voltage power-supply PCA ..... 112
Video interface control ..... 113
Laser/scanner system ..... 113
Image-formation system ..... 114
Electrostatic latent-image formation block ..... 116

Step 1: primary charging ..... 116
Step 2: laser-beam exposure ..... 116
Development block ..... 117
Step 3: developing ..... 117
Transfer block ..... 118
Step 4: image transfer ..... 118
Step 5: separation from the drum ..... 118
Fuser block ..... 119
Step 6: fusing ..... 119
Drum-cleaning block ..... 119
Step 7: drum cleaning ..... 119
Print cartridge ..... 119
Memory tag ..... 120
Pickup-and-feed-system ..... 121
Cassette paper size and presence detection ..... 124
Upper and lower cassette pickup mechanism ..... 125
Multiple-feed prevention mechanism ..... 127
Tray 1 (multipurpose tray) pickup mechanism ..... 128
Skew-correction mechanism (registration) ..... 129
Fuser/delivery block ..... 130
Loop control ..... 130
Jam detection ..... 131
Duplexing unit ..... 133
Duplexing reverse/feed operation ..... 134
Duplexing feed operation ..... 135
Duplexing horizontal registration function ..... 136
Duplexing unit jam detection ..... 137
1 x 500-sheet and 3 x 500-sheet high-capacity input feeder ..... 138
Pickup/feed operation ..... 140
HCI pickup mechanism ..... 142
Lift-up operation ..... 143
Multiple-feed prevention mechanism ..... 145
HCI jam detection ..... 147
Scanner component ..... 148
ADF ..... 150
Input tray ..... 150
ADF simplex printing operation sequence ..... 150
ADF duplex printing operation sequence ..... 151
Multifeed operation ..... 152
End of a scan job operation ..... 153
Paper pick and separation operation ..... 153
Deskew ..... 154
Stapler/stacker component ..... 155
Overview ..... 155
Basic operation ..... 156
Control system ..... 157
Feed/stack system ..... 160
Staple system ..... 175

**5 Removal and replacement**

Removal and replacement strategy ..... 178
Introduction ..... 178
Required tools ..... 179
Types of screws ..... 179
Service approach ..... 180
Before performing service ..... 180
After performing service ..... 180
Parts removal order ..... 181
User-replaceable parts ..... 182
Print cartridge ..... 183
ADF separation pad and pickup and feed roller assemblies (removal and replacement) ..... 184
Transfer roller ..... 187
Tray 1 pickup roller (multipurpose paper pickup roller) ..... 188
Tray 1 separation pad assembly (multipurpose pad assembly) ..... 189
Tray 2 and Tray 3 pickup rollers (paper pickup roller assembly) ..... 191
Tray 2 and Tray 3 separation pad assembly (separation block assembly) ..... 193
Tray 4, Tray 5, and Tray 6 pickup and feed rollers (paper feed roller assembly) ..... 194
Fuser ..... 195
Duplexer ..... 198
Formatter cover and cage ..... 199
Hard drive ..... 201
Fax PCA ..... 202
ADF ..... 203
ADF assembly ..... 204
ADF input tray sensors ..... 206
Separation floor assembly ..... 208
Diverter ..... 210
Jam cover ..... 211
Hinge assemblies ..... 213
Float assembly ..... 214
White backing ..... 217
Front end cover (cap) ..... 219
Rear end cover (cap) ..... 221
ADF PCA and wire harness ..... 224
Input tray ..... 226
Scanner ..... 227
Control panel ..... 228
Scanner controller board (SCB) and cover ..... 230
Scanner assembly ..... 232
Glass assembly and top cover ..... 235
Optic assembly ..... 240
To reinstall the drive belt and optic assembly ..... 246
Page sensors ..... 249
Transmission assemblies and slide rail ..... 250
Stapler/stacker (HP LaserJet M5035xs only) ..... 253
Stapler/stacker assembly ..... 254
Stapler PCA ..... 257
Rear cover ..... 258
Left door ..... 259

Output bin ..... 260
Duplex cover ..... 261
Left cover ..... 262
Right and left rear covers ..... 264
Front door and stapler unit cover ..... 266
Output bin stay (support arm) ..... 270
Rear inner cover ..... 271
Stack cover ..... 272
Stapler unit ..... 273
Paper feed assembly (stapler) ..... 275
Alignment and jogger guide assembly ..... 276
Install the alignment and jogger guide assembly ..... 280
Jogger guide unit ..... 283
Front door interlock switch ..... 286
Print engine (base unit) ..... 288
Formatter cover ..... 290
Face-down cover ..... 291
Left door ..... 292
Left upper cover ..... 293
Rear cover ..... 295
Front cover ..... 296
Face-down side cover ..... 300
Top inner cover ..... 302
Front inner cover ..... 304
Right door ..... 306
Lower left cover ..... 308
Left rear cover ..... 311
Top cover ..... 312
Right rear inner cover ..... 313
Right rear cover ..... 315
Left rear inner cover ..... 316
Print cartridge door ..... 318
Registration assembly ..... 325
Fuser pressure release assembly ..... 328
Fuser ..... 329
Paper delivery assembly ..... 330
Paper feed assembly (base unit) ..... 332
Reinstall the paper feed assembly ..... 333
Fuser fan ..... 338
Fuser motor ..... 339
Laser/scanner ..... 340
Low-voltage power supply assembly ..... 342
Interconnect PCA assembly ..... 345
High-voltage power supply ..... 347
Lifter drive assembly ..... 354
DC controller PCA ..... 357
Upper cassette pickup assembly ..... 359
Lower cassette drive assembly ..... 362
Main motor ..... 363
Lower cassette pickup assembly ..... 368

High capacity input feeder ..... 371
Front door (single tray unit only) ..... 372
Right door ..... 373
Back cover ..... 376
Motor(s) and PCA(s) ..... 377
Paper pickup assemblies ..... 378
Right side tray rail(s) ..... 381
Left side tray rail(s) ..... 382
Lifter driver assembly ..... 384

6 Troubleshooting
Introduction ..... 389
Basic troubleshooting checklist ..... 390
Factors that affect device performance ..... 390
Troubleshooting flowchart ..... 391
Power-on self diagnostic tests ..... 391
Step 1: Does READY appear on the control-panel display? ..... 391
Step 2: Can you print a configuration page? ..... 392
Step 3: Does the device copy? ..... 393
Step 4: Does the job print as expected? ..... 393
Step 5: Does the printer select media from the correct trays? ..... 394
Control-panel message types ..... 396
Control-panel messages ..... 397
Replacement-parts configuration ..... 442
Formatter and dc controller ..... 442
Formatter (new) ..... 442
DC controller (new or previously installed in another printer) ..... 442
Guidelines for using paper ..... 443
Supported media weights and sizes ..... 444
Printing internal information pages ..... 447
Jam locations ..... 448
General paper-path and jam troubleshooting ..... 449
Paper-path checklist ..... 449
Jams in Tray 1 ..... 450
Jams in Tray 2, or Tray 3 ..... 450
Jams in the optional high capacity input feeder ..... 451
Common causes of repeating jams ..... 452
Solve general repeated jams ..... 457
Jam recovery ..... 458
Clear jams ..... 459
Clear jams from the automatic document feeder (ADF) ..... 459
Clear jams from the stapler/stacker ..... 461
Clear jams from the output path ..... 463
Clear jams from the optional duplexer ..... 464
Clear jams from the print-cartridge area ..... 466
Clear jams from the input-tray areas ..... 468
Clear jams from the Tray 1 input area ..... 468
Clear jams from the Tray 2 and Tray 3 input area ..... 468
Clear jams from the Tray 4/5/6 input areas ..... 470
Clear staple jams ..... 472

Solving image-quality problems ..... 475
Solve print-quality problems ..... 475
Solve copy-quality problems ..... 475
Print-quality problems associated with media ..... 475
Print-quality problems associated with the environment ..... 476
Print-quality problems associated with jams ..... 476
Image defect examples ..... 476
Light print (partial page) ..... 478
Light print (entire page) ..... 479
Specks ..... 480
Dropouts ..... 481
Lines ..... 483
Gray background ..... 483
Toner smear ..... 485
Loose toner ..... 485
Repeating defects ..... 487
Repeating image ..... 487
Misformed characters ..... 488
Page skew ..... 489
Curl or wave ..... 490
Wrinkles or creases ..... 490
White lines ..... 491
Tire tracks ..... 491
White spots on black ..... 492
Scattered lines ..... 492
Blurred print ..... 493
Random image repetition ..... 493
Solve copy-quality problems ..... 494
ADF image-quality problems ..... 494
Blank page (ADF) ..... 494
Page skew (ADF) ..... 495
Horizontal lines (ADF) ..... 495
Image shifted (ADF) ..... 495
Unexpected Image (ADF) ..... 496
Flatbed glass image-quality problems ..... 496
Poor uniformity (flatbed) ..... 496
Poor uniformity gradual (flatbed) ..... 496
Lamp inverter failure (flatbed) ..... 496
Streaks on page (flatbed) ..... 497
Unexpected results (flatbed) ..... 497
Solve copy problems ..... 497
Media-handling problems ..... 497
Performance problems ..... 499
Troubleshooting communication interfaces ..... 500
Check communications ..... 500
Troubleshooting the EIO ..... 500
Jetdirect page ..... 500
Boot key sequences ..... 502
Low-level boot key sequences ..... 503
Mid-level boot key sequences ..... 504

High-level boot key sequences ..... 504
Control-panel boot sequence calibration ..... 505
Engine test (formatter removed) ..... 505
Service menu ..... 507
Accessing the service menu ..... 507
Service ID ..... 509
Restoring the service ID ..... 510
Convert the service ID to an actual date ..... 510
Troubleshooting menu ..... 511
Accessing the troubleshooting menu ..... 511
Calibrate the scanner ..... 515
Use the control panel ..... 516
Control-panel layout ..... 516
Home screen ..... 517
Buttons on the touchscreen ..... 518
Control-panel help system ..... 518
Solve fax problems ..... 519
Solve sending problems ..... 519
Solve receiving problems ..... 520
Solve e-mail problems ..... 522
Validate the SMTP gateway address ..... 522
Validate the LDAP gateway address ..... 522
Diagrams ..... 523
ADF ..... 523
Sensors (ADF) ..... 523
Wiring diagram (ADF) ..... 524
Scanner ..... 525
Components (scanner) ..... 525
Wiring diagram (scanner) ..... 526
Stapler/stacker ..... 527
External panels and covers (stapler/stacker) ..... 527
Sensors (stapler/stacker) ..... 528
PCA (stapler/stacker) ..... 529
Wiring diagram (stapler/stacker) ..... 530
Engine (base unit) ..... 531
Engine (base unit) ..... 531
Interface connections (engine) ..... 532
External panels and covers (engine) ..... 533
Major components (engine) ..... 535
Motors and fans (engine) ..... 536
PCAs (engine) ..... 537
Sensors and switches (engine) ..... 538
DC controller PCA connectors (engine) ..... 539
DC controller input/output signals (engine) ..... 541
Wiring diagrams (engine) ..... 546
Timing diagram (engine) ..... 548
High capacity input feeder ..... 549
External covers and panels (HCI) ..... 549
Major components (HCI) ..... 550
Motor(s) and PCA(s) (HCI) ..... 551

Sensors (HCI) ..... 552
Wiring diagrams (HCI) ..... 553
Repetitive defect ruler ..... 554
Interlocks and linkages ..... 555
Print cartridge and MFP contacts ..... 563
Known issues ..... 565
Control-panel ESD disruption ..... 565
Clearing a jam from the right (print cartridge) side ..... 565
Loading Tray 2/3/4/5 with letter or A4 media ..... 566
The stapler/stacker only staples letter and A4 media ..... 566
Formatter cage does not properly seat ..... 566
RFU with a SCB firmware upgrade ..... 566
RFU with a DC controller firmware update ..... 566
EIO device does not properly seat ..... 566
Print cartridge cannot be removed ..... 566
False left door open error message ..... 567
Dark or flickering control-panel display ..... 567
Fuser edge overheat slowdown ..... 567

**7 Parts and diagrams**

Parts ..... 571
How to use the parts lists and diagrams ..... 572
Types of screws ..... 572
Related documentation and software ..... 573
Accessories, supplies, and whole unit components ..... 573
Automatic document feeder (whole unit) ..... 582
Front end cover (ADF) ..... 584
Hinges (ADF) ..... 586
Base assembly (ADF) ..... 588
Backbone assembly (ADF) ..... 590
Jam Cover (ADF) ..... 594
Pickup roller assembly (ADF) ..... 596
Separation pad assembly (ADF) ..... 598
Separation floor assembly (ADF) ..... 600
Scanner assembly base ..... 602
Carriage assembly (scanner; optical assembly) ..... 604
Scanner top assembly ..... 606
Scanner controller board (SCB) assembly ..... 608
Scanner lid sensor assembly ..... 610
Scanner transmission drive assembly ..... 612
Stapler/stacker assembly main body ..... 614
Paper feed assembly (stapler/stacker) ..... 618
Alignment and jogger assembly (stapler/stacker) ..... 620
Stapler assembly (stapler/stacker) ..... 624
Stapler/stacker PCA ..... 626
Print engine external covers and panels ..... 628
Cartridge door assembly (print engine) ..... 632
Internal components (print engine 1 of 3) ..... 636
Internal components (print engine; 2 of 3) ..... 640
Internal components (print engine; 3 of 3) ..... 644

Paper delivery assembly (print engine) ..... 648
Lifter drive assembly (print engine) ..... 652
Fuser drive assembly (print engine) ..... 654
Lower drive assembly (print engine) ..... 656
Upper cassette (print engine) ..... 658
Lower cassette (print engine) ..... 662
Upper cassette pickup assembly (print engine) ..... 666
Lower cassette pickup assembly (print engine) ..... 670
Registration assembly (print engine) ..... 674
Paper feed assembly (print engine) ..... 676
PCA assemblies (print engine) ..... 678
Fuser (print engine) ..... 680
Fuser pressure release assembly (print engine) ..... 684
High capacity input (HCI) 1X500 feeder main body ..... 686
High capacity input (HCI) 3X500 feeder main body ..... 690
Lifter drive assembly (HCI) ..... 694
Cassette (HCI) ..... 696
Paper pickup assembly (HCI) ..... 700
HCI PCA assemblies ..... 704
Alphabetical parts list ..... 706
Numerical parts list ..... 764

**Appendix A Specifications**

Physical specifications ..... 824
Electrical specifications ..... 825
Acoustic emissions ..... 826
Operating environment ..... 826

**Appendix B Service and support**

Hewlett-Packard limited warranty statement ..... 827
Customer self repair warranty service ..... 828
Print cartridge limited warranty statement ..... 829
HP Customer Care ..... 830
Online Services ..... 830
Telephone support ..... 830
Software utilities, drivers, and electronic information ..... 830
HP direct ordering for accessories or supplies ..... 830
HP service information ..... 830
HP service agreements ..... 830
HP Easy Printer Care software ..... 831
HP support and information for Macintosh computers ..... 831
HP maintenance agreements ..... 832
On-site service agreements ..... 832
Next-day on-site service ..... 832
Weekly (volume) on-site service ..... 832
Repacking the device ..... 832
Extended warranty ..... 833

**Appendix C Regulatory information**

FCC regulations ..... 836
Environmental product stewardship program ..... 837
Protecting the environment ..... 837
Ozone production ..... 837
Power consumption ..... 837
Toner consumption ..... 837
Paper use ..... 837
Plastics ..... 837
HP LaserJet print supplies ..... 838
HP print supplies returns and recycling program information ..... 838
Paper ..... 838
Material restrictions ..... 839
Disposal of waste equipment by users in private households in the European Union ..... 839
Material Safety Data Sheet (MSDS) ..... 840
For more information ..... 840
Telecom statement ..... 841
Declaration of conformity ..... 842
Safety statements ..... 843
Laser safety ..... 843
Canadian DOC regulations ..... 843
VCCI statement (Japan) ..... 843
EMI statement (Korea) ..... 843
EMI statement (Taiwan) ..... 843
Laser statement for Finland ..... 843

**Index ..... 845**

For the complete PDF manual
please visit www.LaserPros.com.